
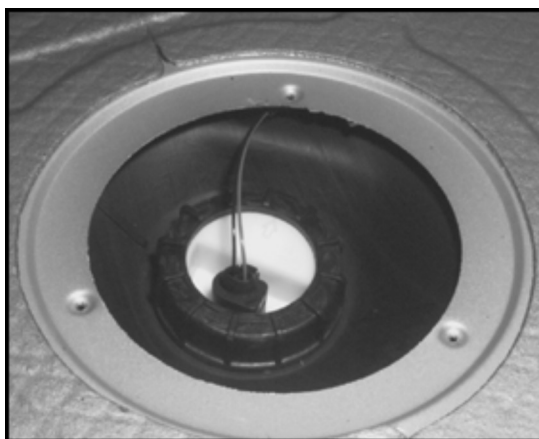



G Fuel level sensor (view 1)

- part of main fuel pump module with fuel pump
-G6-
- access under rear seat bench

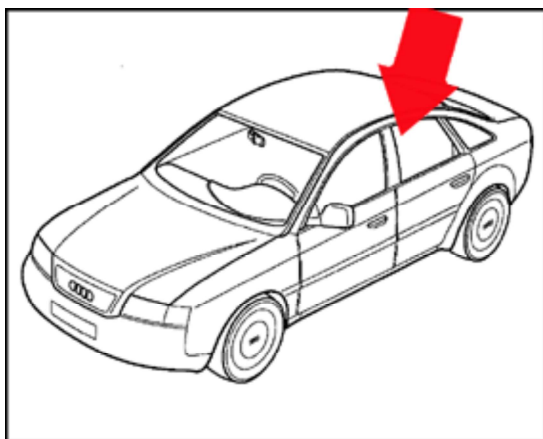

G237 Fuel level sensor 3 (view 1)

- access inside luggage compartment (behind rear seat back)
- quattro only

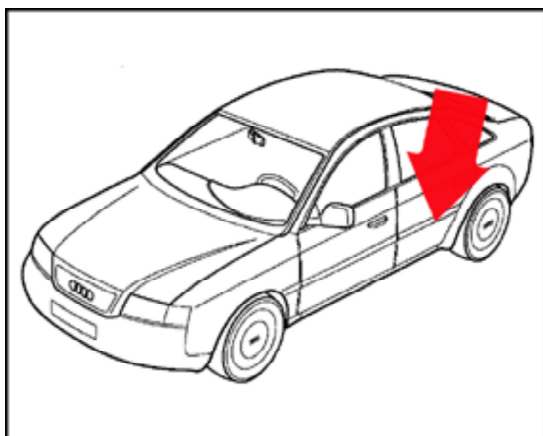

G169 Fuel level sensor 2 (view 1)

- access under rear seat bench, left side
- quattro only